


Schalter	1	2	3	4	5	6
Mittel	✗	✗	✗	✗	✗	
Lang						
TA						✗

- + weiß
- gelb
- blau
- schw +6V
- gelb +7.5V
- rot +120V

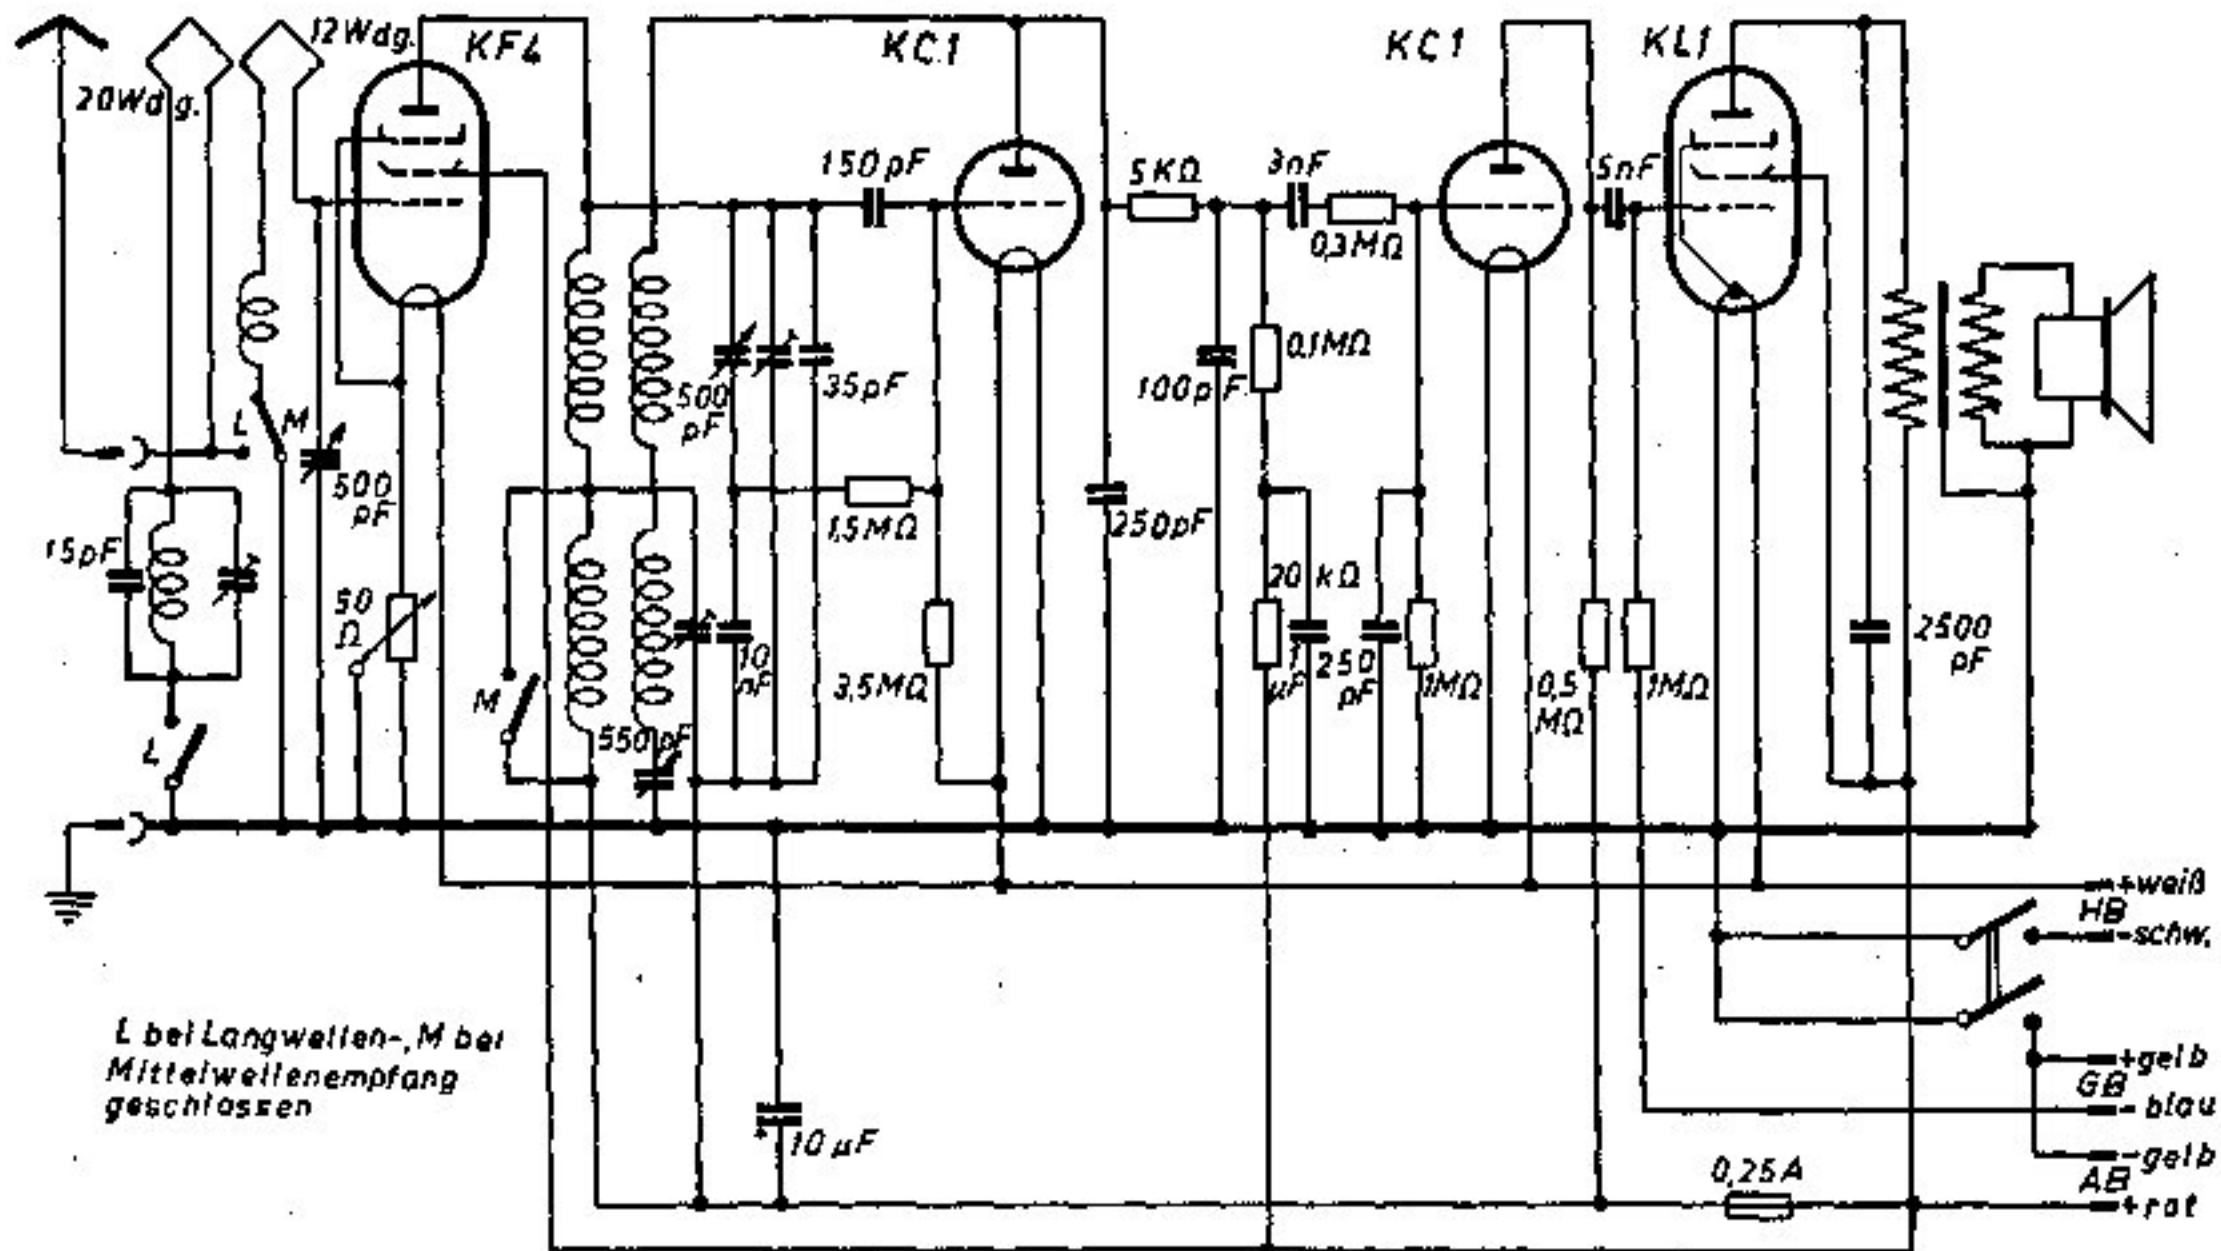

Deutscher Olympiakoffer (1937)